



Quality Makes the Difference

PRODUCT LINE OVERVIEW

TRANSMISSION & BRAKE ITEMS

CEP INTERNATIONAL LTD.

Room 909 shanghai trade center, 800 Quyang Road, Shanghai 200437, China

Tel. +86 21 35072228 Fax +86 21 35073770

Email: sales@cep-intl.com

www.cep-intl.com

All manufacturer's names, numbers, symbols and descriptions are for reference only. It is not implied that any part is the product of these manufacturers. All trade marks are the property of the respective manufacturers.

TRANSMISSION PARTS for CAT MACHINES

FRICITION DISCS AND BRAKE BANDS

NO.	PART NO.	DESCRIPTION
1	1A3987	STCD SM
2	1B9746	STCD SM
3	2B8955	STCD SM
4	4B3533	STCD SI
5	4B4982	STCD SI
6	8B2864	STCD SI
7	5D8526	CD SM
8	6D2358	CD PA
9	6D4535	CD SM
10	7D8434	BRD SM
11	8D2421	BRD PA
12	8D8794	BRD SM
13	8D8796	BRD PA
14	2F8621	CD PA
15	2F8621	STCD SI
16	3F5504	STCD SI
17	8F4453	STCD SM
18	2G9908	BRD PA
19	2G9909	BRD PA
20	7G3129	PSTD PA
21	9G4400	PSTD SI
22	2H2118	CD SI
23	2H6121	MCD SI
24	2H6936	STCD SM
25	4H2922	MCD SI
26	4H2923	MCD SI
27	5H0047	MCD SM
28	5H8530	STCD SI
29	7H2060	STCD SM
30	7H2118	STCD SI
31	8H1331	STCD SI
32	9H9709	STCD SM
33	2J5513	CD SI
34	2J5262	CD SI
35	2J5263	CD SM
36	3K2299	PSTD SI
37	4K1317	STCD SM
38	4K1333	STCD SI

39	5K8617	STCD PA
40	6L2179	CD SM
41	6L9719	CD SM
42	7L7782	CD SI
43	2M8911	STCD SI
44	2M8912	STCD SM
45	4M7124	PSTD SI
46	5M1199	STCD SI
47	5M6122	PSTD SI
48	8M5136	PSTD SI
49	8M6358	PSTD SI
50	8M8550	PSTD SI
51	9M2176	PSTD SI
52	9M8068	BRBA
53	1P4110	PSTD SI
54	1P4803	BRBA
55	1P4804	BRL FO
56	1P6996	STCD SI
57	2P4370	CD SM
58	2P4371	CD PA
59	2P4472	PSTD SM
60	2P9343	CD PA
61	3P0337	PSTD SM
62	3P0340	PSTD PA
63	3P0805	PSTD PA
64	3P1686	PSTD SM
65	3P3241	MCD SM
66	3P5955	PSTD SI
67	8P2051	PSTD SM
68	8P8682	PSTD PA
69	8P8683	PSTD PA
70	8P9293	PSTD PA
71	8P9294	PSTD SI
72	9P1861	PSTD SI
73	9P4251	PSTD SI
74	9P4254	PSTD SI
75	9P5254	PSTD SI
76	9P7390	PSTD SI
77	9P9382	STCD SI
78	1S1361	CD SM
79	1S3736	PSTD SI
80	1S8183	MCD SI
81	1S8184	MCD SI

82	2S1456	PSTD SI
83	2S4983	PSTD SI
84	3S1168	PSTD SM
85	3S1188	PSTD SI
86	3S1691	STCD SM
87	3S7981	PSTD SI
88	4S5891	CD SM
89	4S9072	MCD SI
90	4S9073	MCD SI
91	4S9074	MCD SI
92	4S9075	MCD SI
93	5S5658	BRL FO
94	5S7830	PSTD SI
95	8S2174	STCD SI
96	8S2515	BRLK FO
97	8S3522	PSTD SM
98	8S9000	PSTD SI
99	9S8789	PSTD SM
100	9S9923	PSTD SI
101	3T4026	PSTD SI
102	3T9960	PSTD PA
103	3T9961	PSTD SI
104	6T4944	CD PA
105	6T8686	PSTD PA
106	6T8886	STCD SM
107	7T2336	PSTD SI
108	5V0593	STCD SI
109	9W0473	EBRL FO
110	9W7090	PSTD SI
111	2Y4654	MCD SI
112	3Y7363	MCD SI
113	4Y0709	STCD PA
114	6Y2197	EBRL FO
115	6Y5352	PSTD PA
116	6Y5911	PSTD PA
117	6Y5912	PSTD PA
118	6Y5914	PSTD PA
119	6Y5915	PSTD PA
120	6Y7160	STCD SI
121	6Y7916	BRD PA
122	6Y7920	CD PA
123	6Y7921	PSTD PA
124	6Y7923	CD PA

125	6Y7935	CD PA
126	6Y7957	CD PA
127	6Y7962	CD PA
128	6Y7977	CD SI
129	6Y7981	CD PA
130	6Y8844	PSTD PA
131	6Y9807	PSTD SI

UNIVERSAL JOINTS

NO.	CATERPILLAR	PRECISION
1	542213	330
2	5V7199	331
3	8D1508	338
4	8D1508	338
5	8V7336	351
6	8V6435	358
7	5Y0154	470
8	7V4077	475
9	7V3842	476
10	8V1540	485
11		486
12		493
13	2D3765	508
14	2D3765	508
15	6D2529	522
16	9K1976	535
17	5D9153	536
18	6F7160	540
19	6H1262	541
20		546
21	7J5251	550
22	7J5245	552
23		557
24		560
25		563
26		568
27		569
28	8F7719	570
29	7J5242	574
30		581
31		582
32		584
33	7K0442	785
34	9H9491	793

35		895
36	9C0398	896
37	1S9670	905
38	9V7710	911
39	6H2577	927
40	6H2579	928
41	5M0800	929
42		933
43		950
44	1250	951
45	6S6902	952
46	2V7153	963
47		966
48	2K3631/5T8739	968
49	6K0316/5V1168	969
50	2D2978	983
51	8P8132	988
52	316117	994
53	8D0537	

CLUTCH & FINAL DRIVE PARTS

NO.	PART NO.	DESCRIPTION
1	1B8721	KEY, D6D
2	1B8724	KEY, D6D
3	1H8330	LOCK, FLYWHEEL CLUTCH, D6D
4	1H8382	GEAR, FLYWHEEL CLUTCH, D6D
5	1H8937	DRUM, FLYWHEEL CLUTCH, D6D
6	1K6543	PIN, FLYWHEEL CLUTCH, D6D
7	1K6555	YOKE, FLYWHEEL CLUTCH, D6D
8	1M4102	PLUG, D6D
9	1M9177	PLATE, FLYWHEEL CLUTCH, D6D
10	1M9444	RETAINER, STEERING CLUTCH, D6D
11	1P1637	LEVER, FLYWHEEL CLUTCH, D6D
12	1S2233	BUSHING, FINAL DRIVE D7G
13	1S8764	RING, FLYWHEEL CLUTCH, D6D
14	1T0436	GEAR, TORQUE CONVERTOR D6D
15	1T0438	RETAINER, TORQUE CONVERTOR D6D
16	1T0447	CARRIER, TORQUE CONVERTOR D6D
17	2H4386	PLATE, FLYWHEEL CLUTCH, D6D
18	2H4450	WASHER, FLYWHEEL CLUTCH, D6D
19	2H4482	COLLAR, FLYWHEEL CLUTCH, D6D
20	2H5035	PLATE, FLYWHEEL CLUTCH, D6D
21	2H5046	LINK, FLYWHEEL CLUTCH, D6D
22	2H5047	ROLLER, FLYWHEEL CLUTCH, D6D

23	2H5048	LINK, FLYWHEEL CLUTCH, D6D
24	2M2290	BRACKET, FLYWHEEL CLUTCH, D6D
25	2P9038	OUTER DRUM, STEERING CLUTCH, D8
26	2S4364	RETAINER, FINAL DRIVE D6D
27	2S4365	RETAINER, FINAL DRIVE D6D
28	2S7527	FLANGE, FINAL DRIVE, D7, 983
29	2S7603	OUTER DRUM, STEERING CLUTCH, D6
30	3H2645	WASHER, FLYWHEEL CLUTCH, D6D
31	3H2646	PIN, FLYWHEEL CLUTCH, D6D
32	3H7347	LOCK, FLYWHEEL CLUTCH, D6D
33	3K7124	RETAINER, FLYWHEEL CLUTCH, D6D
34	3P6318	FLANGE, FINAL DRIVE, D6, 977
35	3S0777	SUPPORT, FINAL DRIVE 977
36	3T1898	OUTER DRUM, STEERING CLUTCH, D6D
37	3T1899	INNER DRUM, STEERING CLUTCH, D6D
38	3T1921	INNER DRUM, STEERING CLUTCH, D7G
39	3Y7992	GEAR, D6D
40	4F4585	PLUG, FLYWHEEL CLUTCH, D6D
41	4F6066	GUARD, FINAL DRIVE, D6D
42	4H4021	PLATE ASSY., FLYWHEEL CLUTCH, D6D
43	4K1328	INNER DRUM, STEERING CLUTCH, 955, 951
44	4K6736	BRAKE DRUM, STEERING CLUTCH, 966C
45	4S6256	NUT, FINAL DRIVE, D6D
46	5A7841	HUB, FINAL DRIVE, D6D
47	5D2209	BRAKE DRUM, 631
48	5F4061	RETAINER, FLYWHEEL CLUTCH, D6D
49	5H5500	COLLAR, FLYWHEEL CLUTCH, D6D
50	5M1998	OUTER DRUM, STEERING CLUTCH, D7G
51	5M2026	HUB, STEERING CLUTCH, D7G, 983
52	5M5071	COVER, FLYWHEEL CLUTCH, D6D
53	5M6631	NUT, FINAL DRIVE, D6D
54	5M6637	BUSHING, FINAL DRIVE D6D
55	5M6651	HUB, FINAL DRIVE D6D
56	5M7290	CAGE, STEERING CLUTCH, D6D
57	5M7304	SPRING, STEERING CLUTCH, D6D
58	5M7305	SPRING, STEERING CLUTCH, D6D
59	5S6796	INNER DRUM, STEERING CLUTCH, D7, 983
60	6B7988	PIN, FLYWHEEL CLUTCH, D6D
61	6P0169	HUB, FLYWHEEL CLUTCH, D6D
62	7B5088	OUTER DRUM, STEERING CLUTCH, D5, D6
63	7K8237	OUTER DRUM, STEERING CLUTCH, D4, 955
64	7M5002	INNER DRUM, STEERING CLUTCH, D5, D6
65	7Y0223	SHAFT, FINAL DRIVE, E320

66	7Y0225	SHAFT, FINAL DRIVE, E320
67	7Y1427	SUN GEAR, FINAL DRIVE, E320
68	7Y1428	PLANE GEAR, FINAL DRIVE, E320
69	7Y1430	SUN GEAR, FINAL DRIVE, E320
70	7Y1431	PLANE GEAR, FINAL DRIVE, E320
71	7Y1432	CARRIER, FINAL DRIVE, E320
72	7Y1433	CARRIER, FINAL DRIVE, E320
73	7Y1434	SPACER, FINAL DRIVE, E320
74	7Y1436	GEAR, FINAL DRIVE, E320
75	7Y1631	RING GEAR, FINAL DRIVE, E320
76	8H2434	OUTER DRUM, STEERING CLUTCH, D8
77	8P1851	HUB ASSY., FINAL DRIVE, D6D
78	8P6495	INNER DRUM, STEERING CLUTCH, D6D
79	8V6390	BRAKE DRUM, 966D
80	2V5552	PINION,955L
81	3V5605	PINION,955L
82	9M8117	SHAFT, FLYWHEEL CLUTCH, D6D
83	9P0418	CAGE, FINAL DRIVE, D6D
84	9P9362	PINION,D6D
85	9P9361	GEAR,D6D
86	9S3955	CAGE, STEERING CLUTCH, D7G
87	9W0472	BRAKE SHOE, FLYWHEEL CLUTCH, D6D

SWING SYSTEM

NO.	PART NO.	DESCRIPTION
1	7Y1643	SUN GEAR, E320
2	7Y1644	PLANE GEAR, E320
3	7Y1645	SUN GEAR, E320
4	7Y1646	SHAFT, E320
5	7Y1751	CARRIER, E320
6	7Y1752	CARRIER, E320
7	7Y1754	PLANE GEAR, E320
8	7Y1755	RING GEAR, E320
9	7Y1758	SEAL, E320
10	7Y1764	SHAFT, E320
11	7Y1772	COVER, E320
12	7Y1775	SHAFT, E320
13	7Y1777	COVER, E320

SWING CIRCLE

ITEM	MACHINE MODEL	PART NUMBER
1	CAT320B	1141414
2	CAT320	7Y1563/7Y1564
3	CAT320C,320D	1484671/1484672
4	CAT215	5C0451

5	CAT325/325L/325B	7Y0745
6	CAT225/225B/227/229	8K4127
7	CAT235D	9V9346
8	CAT245/245B	5V2427

PIN & BUSHING (LOADER)

Item	Part Number	Description
1	1V8439	PIN
2	1V8949	PIN
3	1V8954	PIN
4	1V8957	PIN
5	2H4438	PIN
6	2H4498	PIN
7	2M1163	PIN
8	2V6220	PIN
9	2V6221	PIN
10	3F6149	PIN
11	3J5432	PIN
12	3J6577	PIN
13	3V3478	PIN
14	3V6648	PIN
15	4J2585	PIN
16	4K6558	PIN
17	4K8225	PIN
18	4V2122	PIN
19	4V6421	PIN
20	4V7099	PIN
21	4V7105	PIN
22	5M6198	PIN
23	5M6211	PIN
24	5V1508	PIN
25	5V1511	PIN
26	6K5513	PIN
27	6K6175	PIN
28	6K6185	PIN
29	6K7161	PIN
30	6K7162	PIN
31	6K7164	PIN
32	6K7165	PIN
33	6K7167	PIN
34	6K8308	PIN
35	6K8309	PIN
36	6K8311	PIN
37	7K5213	PIN

38	7K7200	PIN
39	7K9343	PIN
40	7K9348	PIN
41	7K9513	PIN
42	7K9514	PIN
43	7K9515	PIN
44	7V6715	PIN
45	7V6716	PIN
46	7Y0223	PIN
47	7Y0225	PIN
48	7Y1764	PIN
49	8K5334	PIN
50	8V7176	PIN
51	8V7659	PIN
52	9M1500	PIN
53	9M1996	PIN
55	2G8629	PIN
56	1V3995	PIN
57	5K8265	PIN
58	5K2432	PIN
59	2G8633	PIN
60	4K8561	PIN
61	5K0871	PIN
62	5K0990	PIN
63	1V7001	BUSHING
64	1V8241	BUSHING
65	2V706	BUSHING
66	3G8779	BUSHING
67	4K6780	BUSHING
68	4K6781	BUSHING
69	4K8659	BUSHING
70	4V380	BUSHING
71	4V381	BUSHING
72	4V8519	BUSHING
73	4V8674	BUSHING
74	4V8675	BUSHING
76	5V1874	BUSHING
77	5V5279	BUSHING
78	7G6042	BUSHING
80	7V3452	BUSHING
81	8R3941	BUSHING
82	8R4267	BUSHING
83	9J7078	BUSHING

84	9J7099	BUSHING
85	9K9158	BUSHING
86	9M3486	BUSHING
89	1V9143	BUSHING
90	2G8624	BUSHING
91	172808	BUSHING
92	3G4704	BUSHING
93	4V8520	BUSHING
94	7J9344	BUSHING
95	7J9366	BUSHING
96	7J9688	BUSHING
97	7J9699	BUSHING
98	7J9682	BUSHING
102	7K9593	BUSHING
103	7K9638	BUSHING
104	7K9639	BUSHING
105	7K9640	BUSHING
106	7K9642	BUSHING
107	7K9643	BUSHING
108	8K5757	BUSHING
109	7J9351	BUSHING

PIN & BUSHING (EXCAVATOR)

NO.	Part Number	Description	Machine
1	414618	PIN	320 325 EXCAVATOR
2	414620	PIN	320 325 EXCAVATOR
3	414621	PIN	320 325 EXCAVATOR
4	414809	PIN	320 325 EXCAVATOR
5	7Y2357	PIN	320 325 EXCAVATOR
6	7Y2348	PIN	320 325 EXCAVATOR
7	7Y2349	PIN	320 325 EXCAVATOR
8	875805	PIN	320 325 EXCAVATOR
9	875806	PIN	320 325 EXCAVATOR
10	875845	PIN	320 325 EXCAVATOR
11	9R6169	PIN	416 BACKHOE LOADER
12	9R6161	PIN	416 BACKHOE LOADER
13	9R6162	PIN	416 BACKHOE LOADER
14	9R2958	PIN	416 BACKHOE LOADER
15	9R6158	PIN	416 BACKHOE LOADER
16	9R6164	PIN	416 BACKHOE LOADER
17	9R6157	PIN	416 BACKHOE LOADER
18	4V3613	PIN	G936, 936 WHEEL LOADER
19	4V3617	PIN	G936, 936 WHEEL LOADER
20	4V3619	PIN	G936, 936 WHEEL LOADER

21	4V3621	PIN	G936、936 WHEEL LOADER
22	4V3623	PIN	G936、936 WHEEL LOADER
23	4V3625	PIN	G936、936 WHEEL LOADER
24	4V2588	PIN	G936、936 WHEEL LOADER
25	410453	BUSHING	320 325 EXCAVATOR
26	414666	BUSHING	320 325 EXCAVATOR
27	7Y2396	BUSHING	320 325 EXCAVATOR
28	7Y3427	BUSHING	320 325 EXCAVATOR
29	7Y3428	BUSHING	320 325 EXCAVATOR
30	1054744	BUSHING	320 325 EXCAVATOR
31	1289863	BUSHING	320 325 EXCAVATOR
32	1289884	BUSHING	320 325 EXCAVATOR
33	1300850	BUSHING	320 325 EXCAVATOR
34	1372919	BUSHING	320 325 EXCAVATOR
35	1433841	BUSHING	320 325 EXCAVATOR
36	2402912	BUSHING	320 325 EXCAVATOR
37	9R0147	BUSHING	416 BACKHOE LOADER
38	9R6227	BUSHING	428 BACKHOE LOADER
39	9R0413	BUSHING	426 BACKHOE LOADER
40	9R0411	BUSHING	426 BACKHOE LOADER
41	9R5828	BUSHING	426 BACKHOE LOADER
42	9R0170	BUSHING	426 BACKHOE LOADER
43	1024560	BUSHING	438B BACKHOE LOADER
44	4V2872	BUSHING	936 WHEEL LOADER
45	4V2873	BUSHING	936 WHEEL LOADER
46	410465	PIN	320 325 EXCAVATOR
47	414813	PIN	320 325 EXCAVATOR

TRANSMISSION PARTS for KOMATSU MACHINES

D60A/E-8

NO.	PART NO.	DESCRIPTION
1	01010-30816	BOLT
2	01010-30825	BOLT
3	01010-31035	BOLT
4	01010-31070	BOLT
5	01010-31225	BOLT
6	01010-31230	BOLT
7	01010-31240	BOLT
8	01010-31850	BOLT
9	01010-50616	BOLT
10	01010-51025	BOLT
11	01010-51030	BOLT
12	01010-51040	BOLT
13	01010-51055	BOLT
14	01010-51065	BOLT
15	01010-51465	BOLT
16	01016-51055	BOLT
17	01050-30820	BOLT
18	01050-51470	BOLT
19	01120-51850	STUD
20	01210-40416	SCREW
21	01322-31216	SCREW,SET
22	01580-10403	NUT
23	01582-11815	NUT
24	01602-00825	WASHER, SPRING
25	01602-01030	WASHER, SPRING
26	01602-01030	WASHER, SPRING
27	01602-01236	WASHER, SPRING
28	01602-01854	WASHER, SPRING
29	01602-21030	WASHER, SPRING
30	01602-21442	WASHER, SPRING
31	04010-00519	KEY, WOODRUFF
32	04020-01638	PIN,DOWEL
33	04025-00412	PIN,ROLL
34	04025-00432	PIN,ROLL
35	04050-01012	PIN, COTTER (K2A)
36	04050-05040	PIN, COTTER (K2A)
37	04059-01025	WIRE, LOCK (K2A)
38	04059-01625	WIRE, LOCK (K2A)
39	04064-05020	RING, SNAP
40	04065-08025	RING, SNAP

41	06030-21311	BEARING
42	06030-22211	BEARING
43	06030-22311	BEARING
44	06041-00210	BEARING
45	06120-01612	BEARING, NEEDLE
46	06120-01612	BEARING, NEEDLE
47	06120-02216	BEARING, NEEDLE
48	06120-02520	BEARING, SPRING
49	07000-02015	O-RING (K2A)
50	07000-02100	O-RING (K2A)
51	07000-03048	O-RING (K2A)
52	07000-05440	O-RING (K2)
53	07000-62140	O-RING (K2)
54	07000-63025	O-RING (K2)
55	07000-65165	O-RING (K2)
56	07002-32434	O-RING (K2)
57	07011-00020	SEAL,OIL (K2A)
58	07012-00022	SEAL (K2A)
59	07012-00025	SEAL,OIL (K2A)
60	07012-10085	SEAL,OIL (K2)
61	07040-12414	PLUG
62	07043-00211	PLUG
63	07043-00211	PLUG,TAPER
64	07046-03520	PLUG
65	07048-01610	PLUG
66	125-15-36170	SPRING
67	130-09-13171	BEARING,ROLLER
68	130-09-15440	RING,SNAP
69	130-09-15610	RING,SNAP
70	130-09-31230	BEARING
71	131-11-11220	RING,SEAL
72	131-11-11220	RING,SEAL
73	131-14-42630	SHAFT
74	131-14-43160	BOLT
75	131-14-45560	COLLAR
76	131-14-45560	COLLAR
77	131-14-46182	COLLAR
78	131-14-46182	COLLAR
79	140-09-15410	RING,SNAP
80	141-14-32117	FORK,F-R
81	141-14-32125	FORK,1ST AND 2ND
82	141-14-32134	FORK,3RD AND 4TH
83	141-14-32152	BOSS

84	141-14-32162	BOSS
85	141-14-32175	SHAFT
86	141-14-32184	SHAFT
87	141-14-32194	SHAFT
88	141-14-32233	FORK,5TH
89	141-14-32241	SPRING
90	141-14-32260	PIN,DOWEL
91	141-14-32270	PLUNGER
92	141-14-32316	CASE
93	141-14-32321	GASKET (K2A)
94	141-14-32331	STOPPER
95	141-14-32350	GASKET (K2A)
96	141-14-32360	COVER
97	141-14-32371	PLUNGER
98	141-14-32380	SPRING
99	141-14-32412	COVER
100	141-14-32421	SHAFT
101	141-14-32432	GASKET (K2A)
102	141-14-32441	FLANGE
103	141-14-32471	PLATE
104	141-14-32510	COVER
105	141-14-32521	GASKET (K2A)
106	141-14-32530	COVER
107	141-14-32540	GASKET (K2A)
108	141-14-32612	GATE
109	141-14-32630	BOOT
110	141-14-32711	ADAPTER
111	141-14-32721	SHAFT
112	141-14-32731	COVER
113	141-14-32751	SPRING
114	141-14-32760	SEAL,SEAL
115	141-14-32770	COVER
116	141-14-32780	WASHER
117	141-14-32825	LEVER
118	141-14-32850	WASHER
119	141-14-32860	WASHER
120	141-14-32920	WASHER
121	141-14-34190	RING,SEAL
122	141-14-34220	NUT
123	141-14-34231	PIN
124	141-14-34240	PLATE,LOCK
125	141-14-34250	PLATE (K2)
126	141-14-35112	COVER

127	141-14-35141	HOLDER
128	141-14-35150	LOCK,LOCK (K2)
129	141-14-35180	RACE,INNER
130	141-14-35190	BUSHING
131	141-14-35190	BUSHING
132	141-14-35210	COLLAR
133	141-14-35224	GEAR
134	141-14-35233	GEAR
135	141-14-35243	GEAR
136	141-14-35250	RACE, INNER
137	141-14-35250	RACE, INNER
138	141-14-35260	COLLAR
139	141-14-35271	SPACER
140	141-14-35290	COLLAR
141	141-14-35310	RACE,INNER
142	141-14-35361	HOLDER
143	141-14-35371	COVER
144	141-14-35380	COLLAR
145	141-14-35390	PLATE,LOCK (K2)
146	141-14-35411	GASKET (K2)
147	141-14-35420	RACE,INNER
148	141-14-36152	HOLDER
149	141-14-36173	GEAR 28 TEETH
150	141-14-36183	GEAR 31 TEETH
151	141-14-36250	COLLAR
152	141-14-36260	COLLAR
153	141-14-36311	GASKET (K2)
154	141-14-37312	TUBE
155	141-14-37320	SUPPORT
156	141-14-55110	SHAFT,COUNTER
157	144-14-05011	SHIM KIT (K2)
158	144-14-06011	SHIM KIT (K2)
159	144-14-12114	SHAFT
160	144-14-12120	PLUNGER
161	144-14-12130	SPRING
162	144-14-12141	LEVER
163	144-14-12155	SHAFT
164	144-14-12170	SPRING
165	144-14-12240	CLIP
166	144-14-13210	LEVER
167	144-14-14160	GEAR, 24 TEETH
168	144-14-14240	BEARING
169	144-14-14330	COVER

170	144-14-14340	COLLAR
171	144-14-14411	GEAR, 22 TEETH
172	144-14-14422	GEAR, 21 TEETH
173	144-14-14430	GEAR
174	144-14-15132	GEAR, 39 TEETH
175	144-14-15140	GEAR
176	144-14-15170	GEAR, 36 TEETH
177	144-14-16110	SHAFT, POWER TAKE OFF
178	144-14-16212	GEAR, 35 TEETH
179	144-14-54110	COVER
180	144-14-54120	CAGE
181	144-14-54130	SHAFT, MAIN
182	144-14-54140	COUPLING
183	144-14-54180	CAGE
184	144-14-54220	SHAFT
185	144-14-54290	GEAR
186	144-14-54310	BEARING
187	144-14-54320	CAGE
188	144-14-54510	PLATE
189	144-14-54620	O-RING (K2)
190	144-14-55180	GEAR
191	144-14-56190	COVER
192	14F-14-14280	GEAR
193	14F-14-15120	GEAR
194	150-14-15260	CLAMP
195	150-15-21140	NUT
196	150-15-21150	SCREW
197	170-14-13222	SCREW
198	567-15-12180	O-RING (K2)

D65A/E-8

NO.	PART NO.	DESCRIPTION
1	01010-30610	SCREW
2	01010-31030	SCREW
3	01010-51025	SCREW
4	01010-51035	SCREW
5	01010-51060	SCREW
6	01010-51090	SCREW
7	01010-51240	SCREW
8	01010-51460	SCREW
9	01010-51845	SCREW
10	01050-51480	SCREW
11	01120-51840	SCREW
12	01582-11815	NUT

13	01602-21030	SPACER
14	01602-21230	SPACER
15	01602-21442	SPACER
16	01643-31445	SPACER
17	01643-31845	SPACER
18	01643-51032	SPACER
19	04020-01024	PIN
20	04020-01228	PIN
21	04020-01638	PIN
22	04064-05020	SPACER(USED ON SHAFT)
23	04064-06525	SPACER(USED ON SHAFT)
24	04064-07525	SPACER
25	04064-08025	SPACER(USED ON SHAFT)
26	04065-03212	SPACER
27	04065-03815	SPACER(USED ON HOLE)
28	04065-08530	SPACER(USED ON HOLE)
29	04070-00105	SPACER(USED ON SHAFT)
30	04070-00120	SPACER
31	04260-00635	STEEL BALL
32	04260-00952	STEEL BALL
33	06000-06016	BEARING
34	06040-06022	BEARING
35	06042-01015	BEARING
36	07000-02075	O TYPE RING
37	07000-02145	O TYPE RING
38	07000-03045	O TYPE RING
39	07000-05160	O TYPE RING
40	07000-05280	O TYPE RING
41	07000-05440	O TYPE RING
42	07000-62090	O TYPE RING
43	07000-63022	O TYPE RING
44	07000-72018	O TYPE RING
45	07000-75042	O TYPE RING
46	07002-03634	O TYPE RING
47	07012-10095	OIL SEAL(MADE IN CHINA)
48	07012-20090	OIL SEAL(MADE IN CHINA)
49	07018-12455	OIL SEAL
50	07018-12605	OIL SEAL
51	07043-00108	SCREW
52	07043-00211	SCREW
53	07044-13620	SCREW
54	09231-01430	ELASTIC SLEEVE
55	09232-03225	BEARING

56	09232-03832	BEARING(MADE IN CHINA)
57	09232-03838	BEARING(MADE IN CHINA)
58	124-15-42190	SPACER
59	130-09-13770	BEARING
60	130-09-16890	SPACER(USED ON SHAFT)
61	135-15-11643	NUT
62	141-21-32112	SPIRAL BEVEL GEAR
63	144-15-11290	OIL SEAL
64	144-15-12260	OIL SEAL
65	144-15-21006	TRANSMISSION ASSEMBLY
66	144-15-21121	PAPER SPACER
67	144-15-21191	SCREW
68	144-15-21320	SCREW
69	144-15-21390	SPACER
70	144-15-22120	SHAFT COUPLING
71	144-15-22172	SPIRAL BEVEL PINIONG
72	144-15-22421	FIRST GEAR
73	144-15-22561	PUSHING SPACER
74	144-15-22571	PUSH SPACER
75	144-15-22760	PIN
76	144-15-22840	BEARING BLOCK
77	144-15-22860	SPRING SPCKER(HOLE)
78	144-15-22871	OIL SEAL
79	144-15-22881	OIL SEAL
80	144-15-22891	OIL SEAL
81	144-15-24180	SLEEVE
82	144-822-1220	BEARING SEAT
83	144-822-1230	OIL SEAL SEAT
84	145-14-12790	SPRING
85	145-14-31662	OUT CASE WELDINGS
86	145-15-11320	BACKWARD RING GEAR
87	145-15-11570	SPACER
88	145-15-12670	SPACER
89	145-15-21260	SPACER(C)
90	145-15-21270	SPACER(B)
91	145-15-21280	SPACER(A)
92	145-15-31331	PIN
93	145-15-31340	RING
94	145-15-31350	PIN SPACER
95	145-15-31650	SPRING
96	145-15-41130	THIRD CYLINDER
97	145-15-41140	THIRD BRAKE DISK
98	145-15-41151	BRACKET

99	145-15-41162	BACKWARD CYLINDER
100	145-15-41171	FORWARD CYLINDER
101	145-15-41181	PARTITION PLATE
102	145-15-41210	BEARING BASE
103	145-15-41221	OIL SEAL SPACER
104	145-15-41260	OIL SEAL SEAT
105	145-15-41352	CASE
106	145-15-41410	BEND PIPE
107	145-15-41620	OIL FILTER ASSEMBLY
108	145-15-42110	FORWARD SUN GEAR
109	145-15-42130	FORWARD SUN GEAR(B)
110	145-15-42140	BACKWARD SUN GEAR
111	145-15-42150	THIRD SUN GEAR
112	145-15-42160	SECOND SUN GEAR
113	145-15-42180	PARTITION SLEEVE
114	145-15-42190	SPACER
115	145-15-42210	INPUT SHAFT
116	145-15-42230	SPLINED SPINDER
117	145-15-42240	SECOND,THIRD PLANET GEAR
118	145-15-42280	SPACER(USED ON SHAFT)
119	145-15-42290	END COVER
120	145-15-42320	FORWARD PLANET CARRIER
121	145-15-42331	BACKWARD PLANET GEAR BRACKET
122	145-15-42380	SECOND PANET CARRIER
123	145-15-42450	BACKWARD PLANET GEAR
124	145-15-42460	FORWARD PLANET GEAR
125	145-15-42510	FORWARD PLANET GEAR SHAFT
126	145-15-42520	BACKWARD PLANET GEAR SHAFT
127	145-15-42530	BACKWARD PLANET GEAR SHAFT
128	145-15-42540	SECOND PLANET GEAR SHAFT
129	145-15-42550	THIRD PLANET GEAR SHAFT
130	145-15-42611	FORWARD RING GEAR
131	145-15-42630	THIRD RING GEAR
132	145-15-42640	SECOND RING GEAR
133	145-15-42670	BRAKE PLATE
134	145-15-42730	FIRST PISTON
135	145-15-42740	PISTON
136	145-15-42810	OIL SEAL
137	145-15-42820	OIL SEAL
138	145-15-42910	BLOCK BOARD
139	145-15-42930	VALVE CORE
140	145-15-43111	RIGHT CASE
141	145-15-44170	SLEEVE

142	154-15-12260	FIRST CYLINDER
143	154-15-12351	FIRST GEAR BRACKET
144	154-15-12716	FRICITION PLATE(A)
145	170-14-22330	SPRING
146	234-15-12270	SPRING
147	234-15-12350	OIL SEAL
148	234-15-12790	SCREW
149	234-15-12810	PIN
150	287-15-12990	BRAKE PLATE
151	424-15-12710	FRICITION PLATE(B)
152	586-15-11380	SCREW

D85A-18

NO.	PART NO.	DESCRIPTION
1	01010-50814	SCREW
2	01010-50825	SCREW
3	01010-51065	SCREW
4	01010-51230	SCREW
5	01010-51235	SCREW
6	01010-51240	SCREW
7	01010-51250	SCREW
8	01010-51470	SCREW
9	01582-11210	NUT
10	01602-20825	SPACER
11	01602-21030	SPACER
12	01602-21236	SPRING SPACER
13	01602-21442	SPRING SPACER
14	04020-00616	PIN
15	04020-01228	PIN
16	04064-06020	ELASTIC SPACER(ON SHAFT)
17	04064-08530	ELASTIC SPACER(ON SHAFT)
18	04065-09030	SPRING SPACER(ON HOLE)
19	04070-00130	SPRING SPACER(ON SHAFT)
20	04077-00125	ELASTIC SPACER(ON HOLE)
21	04081-05512	BLOCK SPACER
22	04081-06012	BLOCK SPACER
23	04260-00635	STEEL BALL
24	04260-00952	STEEL BALL
25	04418-03060	RIVET
26	04770-00120	ELASTIC SPACER(ON SHAFT)
27	06000-06016	BEARING
28	06000-06924	BEARING
29	06000-22210	BEARING
30	06042-00212	BEARING

31	07000-05290	O TYPE RING
32	07000-62018	O TYPE RING
33	07000-63022	O TYPE RING
34	07000-63032	O TYPE RING
35	07000-65055	O TYPE RING
36	07012-10100	OIL SEAL
37	07018-11805	OIL SEAL
38	07042-00211	SCREW
39	07042-20108	SCREW
40	07048-02216	PLUG
41	09231-01430	SLEEVE
42	09232-02832	BEARING
43	09233-03820	SPACER
44	09233-05125	PUSH SPACER
45	09233-05138	BEARING
46	09603-05080	NAME BOARD
47	130-09-15740	ELASTIC BLOCK BOARD
48	130-09-16780	ELATIC BLOCK BOARD
49	145-14-11320	OIL PLUG
50	145-15-11570	SPACER
51	145-15-31000	TRANSMISSION ASSEMBLY
52	154-15-12715	FRICITION PLATE
53	154-15-21111	CASE
54	154-15-21121	SPACER
55	154-15-21140	SPACER
56	154-15-22742	CLUTCH PISTON
57	154-15-22760	SPRING
58	154-15-22811	OIL SEAR
59	154-15-22821	OIL SEAL
60	154-15-22831	OIL SEAL
61	154-15-23151	BEARING SEAT
62	154-15-23380	BEARING COVER
63	154-15-23460	SPACER
64	154-15-23480	SPACER
65	154-15-23490	SPACER
66	154-15-24110	VALVE
67	154-15-29120	BEARING
68	154-15-31130	BRACKET SLEEVE
69	154-15-31160	SECOND CYLINDER
70	154-15-31170	BLOCK BOARD
71	154-15-31180	FIRST CYLINDER
72	154-15-31210	BEARING SEAT
73	154-15-31490	PLANET PINION

74	154-15-32110	SPINDLE
75	154-15-32120	SUN GEAR
76	154-15-32130	DOUBLE GEAR
77	154-15-32150	SHAFT COUPLING
78	154-15-32310	BEARING SEAT
79	154-15-32320	BIG PLANET CARRIER
80	154-15-32450	PLANET GEA
81	154-15-32460	PLANET GEAR
82	154-15-32470	BACKWARD GEAR
83	154-15-32510	PLANET GEAR SHAFT
84	154-15-32530	PLANET GEAR SHAFT
85	154-15-32610	FIRST RING GEAR
86	154-15-33110	CASE(RIGHT)
87	154-15-33211	DRIVE GEAR
88	154-15-33230	SHAFT
89	154-15-33240	SPIRAL BEVEL PINION
90	154-15-33340	SPACER
91	154-15-33350	BEARING SEAT
92	154-15-33390	BLOCK BOARD
93	154-15-34170	SLEEVE
94	154-15-39120	BEARING
95	154-15-39170	BEARING
96	155-15-11152	DOUBLE DIRECTION CYLINDER
97	155-15-11191	SCREW
98	155-15-11291	SCREW
99	155-15-12212	IDLE SHAFT
100	155-15-12363	SMALL PLANET CARRIER
101	155-15-12371	INNER DRUM GEAR
102	155-15-12430	OUT DRUM
103	155-15-12551	PLANET GEAR SHAFT
104	155-15-12620	SECOND GEAR
105	155-15-12632	THIRD RING GEAR
106	155-15-12650	FORTH RING GEAR
107	155-15-12770	PIN
108	155-15-12811	OIL SEAR
109	155-15-12820	OIL SEAL
110	155-15-12880	SECOND,THIRD,FORTH PISTON
111	155-15-12892	PISTON
112	155-15-13510	SPACER
113	155-15-13520	SPACER
114	155-15-23470	SPACER
115	175-15-12160	BLOCK BOARD
116	175-15-12713	FRICTION PLATE

117	175-15-14120	SPRING
118	175-15-14130	LUBRICATION VALVE
119	175-15-14141	SPRING
120	175-15-14150	COVER
121	175-15-14161	SPACER
122	175-15-31220	PIN
123	175-15-41310	SHAFT SPACER
124	175-15-42180	SPRING
125	175-15-42220	PIN
126	175-15-42230	SCREW
127	175-15-42240	PIN SPACER
128	175-15-42340	BLOCK BOARD
129	175-15-42412	CLUTCH PISTON
130	175-15-42430	O TYPE RING
131	175-15-42670	ELASTIC SPACER
132	175-15-42721	BRAKE PLATE
133	175-15-42780	SPRING
134	175-15-42800	SPRING
135	175-15-42850	OIL SEAL
136	175-15-42880	SPRING
137	175-15-42971	SHAFT SPACER
138	175-15-43270	BEARING
139	175-15-44180	SLEEVE
140	175-15-49340	BEARING
141	195-15-11230	SPACER
142	195-15-11230	OIL PLUG
143	195-15-12141	SPACER
144	234-15-12780	OIL PLUG
145	234-15-12790	OIL PLUG
146	234-21-12180	NUT
147	234-21-12190	LOCK SPACER
148	234-21-12210	PIN SPACER
149	281-15-12720	CLUTCH PLATE

D155A-1

NO.	PART NO.	DESCRIPTION
1	01010-30814	SCREW
2	01010-31230	SCREW
3	01010-31240	SCREW
4	01010-31250	SCREW
5	01010-31435	SCREW
6	01010-31490	SCREW
7	01010-50825	SCREW
8	01010-51055	SCREW

9	01010-51065	SCREW
10	01010-51230	SCREW
11	01010-51235	SCREW
12	01010-51240	SCREW
13	01582-01210	NUT
14	01602-01236	ELASTIC SPACER
15	01602-01442	SPRING SPACER
16	01602-20825	SPRING SPACER
17	01602-21030	SPRING SPACER
18	01602-21236	SPRING SPACER
19	04005-01030	SPACER(USED ON HOLE)
20	04020-00616	PIN
21	04020-01228	PIN
22	04064-06020	SPACER(USED ON SHAFT)
23	04064-08530	SPACER(USED ON SHAFT)
24	04070-00130	SPACER(USED ON SHAFT)
25	04081-05512	LOCK SPACER
26	04081-07012	LOCK SPACER
27	04260-00952	STEEL BALL
28	04268-00635	STEEL
29	06000-06016	BEARING
30	06000-06924	BEARING
31	06000-22211	BEARING
32	06042-00212	BEARING
33	07000-05055	O TYPE RING
34	07000-05290	O TYPE RING
35	07000-62018	O TYPE RING
36	07000-63022	O TYPE RING
37	07000-63023	O TYPE RING
38	07000-63032	O TYPE RING
39	07012-10100	OIL SEAL
40	07018-11805	OIL SEAL
41	07042-00211	OIL PLUG
42	07042-20211	OIL PLUG
43	07048-02216	PLUG
44	09231-01430	SLEEVE
45	09232-03838	BEARING
46	09232-05125	BEARING
47	09233-03820	PUSH SPACER
48	09233-05125	PUSH SPACER
49	130-09-15740	ELASTIC BLOCK BOARD
50	130-09-16780	ELASTIC BLOCK BOARD
51	145-14-12760	PIN

52	145-14-12790	SPRING
53	145-15-11320	OIL SEAL PLUG
54	145-15-11570	SPACER
55	145-15-12810	SPRING
56	154-15-12715	FRICTION PLATE
57	170-14-22140	ELASTIC SPACER
58	175-15-12160	BLOCK BOARD
59	175-15-12715	FRICTION PLATE
60	175-15-12750	OIL SEAL
61	175-15-12780	PIN
62	175-15-12820	OIL SEAL
63	175-15-13311	SPACER
64	175-15-13331	SPACER
65	175-15-13380	SPACER
66	175-15-13390	SPACER
67	175-15-13470	SPACER
68	175-15-13480	SPACER
69	175-15-14 11	VALVE
70	175-15-141 0	SPRING
71	175-15-141 0	LUBRICATION VALVE
72	175-15-141 1	SPRING SEAT
73	175-15-141 0	COVER
74	175-15-141 1	SPACER
75	175-15-31210	PIN
76	175-15-3212	DRIVE GEAR
77	175-15-41001	TRANSMISSION ASSEMBLY
78	175-15-41111	CASE
79	175-15-41121	SPACER
80	175-15-41140	PLATE
81	175-15-41150	DOUBLE CYLINDER
82	175-15-41160	SECOND PISTON
83	175-15-41172	BLOCK BOARD
84	175-15-41189	FIRST CYLINDER
85	175-15-41192	SCREW
86	175-15-41211	BEARING SEAT
87	175-15-41292	SCREW
88	175-15-42112	SPINDLE
89	175-15-42121	SUN GEAR
90	175-15-42131	DOUBLE GEAR
91	175-15-42151	SHAFT COUPLING
92	175-15-42180	SPRING
93	175-15-42213	IDLE SHAFT
94	175-15-42220	PIN

95	175-15-42230	SCREW
96	175-15-42240	LOCK PLATE
97	175-15-42310	SPACER
98	175-15-42311	BEARING SEAT
99	175-15-42322	BIG PLANET CARRIER
100	175-15-42340	BLOCK BOARD
101	175-15-42364	SMALL PLANET CARRIER
102	175-15-42371	INNER DRUM GEAR
103	175-15-42412	CLUTCH CYLINDER
104	175-15-42421	OUT DRUM
105	175-15-42430	O TYPE RING
106	175-15-42451	PLANET GEAR
107	175-15-42471	BACKWARD PLANET GEAR
108	175-15-42491	SMALL PLANET GEAR
109	175-15-42512	PLANET GEAR SHAFT
110	175-15-42532	PANET GEAR SHAFT
111	175-15-42552	PLANET GEAR SHAFT
112	175-15-42610	SECOND RING GEAR
113	175-15-42620	FIRT RING GEAR
114	175-15-42632	THIRD RING GEAR
115	175-15-42650	FORTH RING GEAR
116	175-15-42670	ELASTIC BLOCK BOARD
117	175-15-42721	BRAKE PLATE
118	175-15-42740	CLUTCH PISTON
119	175-15-42750	OIL SEAL
120	175-15-42780	SPRING
121	175-15-42850	OIL SEAL
122	175-15-42860	FIRST PISTON
123	175-15-42870	SECOND,THIRD,FORTH PISTON
124	175-15-42880	SPRING
125	175-15-42890	SPRING
126	175-15-42920	BRAKE PLATE
127	175-15-42971	SPACER
128	175-15-43116	RIGHT CASE
129	175-15-43152	BEARING SEAT
130	175-15-43232	DRIVEN GEAR
131	175-15-43270	BEARING
132	175-15-44180	SLEEVE
133	175-15-44190	SLEEVE
134	175-15-49340	BEARING
135	175-21-22140	SPIRAL BEVEL GEAR
136	178-15-11130	BRACKET SLEEVE
137	178-15-13140	BEARING COVER

138	178-15-13240	SPIRAL BEVEL PINION
139	178-15-13260	BLOCK BOARD
140	178-15-13280	BEARING SEAT
141	178-15-13360	SPACER
142	178-15-13370	SPACER
143	178-15-13520	SPACER
144	178-15-13540	SPACER
145	178-15-19330	BEARING
146	178-15-19350	BEARING
147	195-15-11230	OIL PLUG
148	195-15-11240	SPACER
149	195-15-12441	BLOCK SPACER
150	195-15-12740	OIL SEAL
151	234-15-11220	OIL SEAL
152	234-15-12780	OIL PLUG
153	234-15-12790	OIL PLUG
154	234-21-12180	NUT
155	234-21-12190	LOCK PLATE
156	234-21-12210	LOCK PLATE
157	281-15-12720	CLUTCH PLATE

TORQUE CONVERTOR

D85A-18

NO.	PART NO.	DESCRIPTION
1	01010-51225	BOLT
2	01010-51230	BOLT
3	01010-51235	BOLT
4	01010-51240	BOLT
5	01010-51290	BOLT
6	01010-61030	BOLT
7	01010-61035	BOLT
8	01010-61230	BOLT
9	01590-10607	NUT
10	01602-21030	WASHER,SPRING
11	01602-21236	WASHER,SPRING
12	01641-20608	WASHER
13	01641-21223	WASHER
14	01643-31032	WASHER
15	04050-11212	PIN,COTTER (KIT)
16	04064-03015	RING,SNAP
17	04064-06020	RING,SNAP
18	04064-08025	RING,SNAP
19	04418-13060	SCREW
20	04530-11628	BOLT

21	06030-05206	BEARING
22	07000-62070	O-RING (KIT)
23	07000-62130	O-RING (KIT)
24	07000-65190	O-RING (KIT)
25	07002-43634	O-RING (KIT)
26	07040-11007	PLUG
27	07042-30415	PLUG
28	07044-13620	PLUG,MAGNET
29	09607-05080	PLATE
30	134-13-13410	COVER
31	134-13-13430	STUD
32	154-13-00101	TORQUE CONVERTER A.
33	154-13-11240	BEARING
34	154-13-11730	SPACER
35	154-13-13360	BEARING
36	154-13-41123	PUMP
37	154-13-41141	GEAR
38	154-13-41150	PLATE,LOCK (KIT)
39	154-13-41160	BEARING
40	154-13-41510	TURBINE ASS'Y
41	154-13-41652	SHAFT
42	154-13-41660	COUPLING ASS'Y
43	154-13-42110	STATOR
44	154-13-42120	RACE
45	154-13-42521	SHAFT
46	154-13-42710	RING,SEAL
47	154-13-42720	COVER
48	154-13-43111	HOUSING
49	154-13-51180	PLATE
50	175-11-11111	GASKET (KIT)
51	175-13-21220	GEAR
52	175-13-21691	HOLDER
53	175-13-21711	PLATE,LOCK (KIT)
54	175-13-21720	RING,SEAL
55	175-13-21810	BOLT
56	175-13-22760	SEAL,OIL (KIT)
57	175-13-23220	COVER
58	175-13-23231	GASKET (KIT)
59	175-13-23500	PUMP ASS'Y
60	195-13-05020	SHIM ASS'Y (KIT)
61	195-13-11261	PLATE,LOCK (KIT)
62	195-13-13420	FILTER
63	195-13-14111	GEAR

64	195-13-16100	RELIEF VALVE ASS'Y
65	234-13-11211	CASE
66	234-13-11250	PILOT

D155A-1

NO.	PART NO.	DESCRIPTION
1	01010-31030	BOLT
2	01010-31225	BOLT
3	01010-31230	BOLT
4	01010-31235	BOLT
5	01010-31240	BOLT
6	01010-31290	BOLT
7	01010-31295	BOLT,SPRING
8	01010-61035	BOLT
9	01010-61045	BOLT
10	01602-01030	WASHER,SPRING
11	01602-01236	WASHER,SPRING
12	01641-21223	WASHER
13	01643-31032	WASHER
14	01643-31232	WASHER,SPRING
15	04064-03015	RING
16	04064-06525	RING,SNAP
17	04064-08530	RING,SNAP
18	04418-03060	SCREW
19	04530-11628	BOLT
20	06030-05206	BEARING
21	06040-06313	BEARING
22	07000-35055	O-RING (KIT)
23	07000-65135	O-RING (KIT)
24	07000-65190	O-RING (KIT)
25	07002-43634	O-RING (KIT)
26	07005-01612	GASKET
27	07011-10080	SEAL
28	07020-00001	FITTING
29	07040-11209	PLUG
30	07042-20415	PLUG
31	07044-13620	PLUG
32	09607-05080	PLATE
33	134-13-13400	FILTER ASS'Y
34	175-11-11111	GASKET (KIT)
35	175-13-21007	TORQUE CONVERTOR A.
36	175-13-21125	PUMP
37	175-13-21160	BEARING
38	175-13-21180	PLATE

39	175-13-21213	CASE
40	175-13-21220	GEAR
41	175-13-21240	BEARING
42	175-13-21253	PILOT
43	175-13-21513	TURBINE ASS'Y
44	175-13-21641	COUPLING ASS'Y
45	175-13-21654	SHAFT
46	175-13-21692	HOLDER
47	175-13-21712	PLATE (KIT)
48	175-13-21750	SEAT
49	175-13-21770	SPACER
50	175-13-22122	RACE
51	175-13-22313	STATOR
52	175-13-22524	SHAFT
53	175-13-22721	COVER
54	175-13-22730	SEAL
55	175-13-23220	COVER
56	175-13-23231	GASKET (KIT)
57	175-13-23290	PLUG
58	175-13-23500	PUMP ASS'Y
59	175-13-24111	GEAR
60	175-13-26401	REGULATOR VALVE A.
61	178-13-11720	RING,SEAL
62	195-13-11143	GEAR
63	195-13-11261	PLATE (KIT)
64	195-13-11810	BOLT
65	195-13-12711	RING
66	195-13-13114	HOUSING
67	195-13-16100	RELIEF VALVE ASS'Y

SWING SYSTEM

PC200-5

NO.	PART NO.	DESCRIPTION
1	01010-51045	BOLT
2	01011-51200	BOLT
3	01643-31032	WASHER
4	06000-22218	BEARING
5	06000-22319	BEARING
6	06002-30218	BEARING
7	06002-30310	BEARING
8	07012-00125	SEAL
9	205-32-51211	BOLT, SHOE
11	20Y-26-12271	CARRIER
12	20Y-26-13130	GEAR

13	20Y-26-13221	GEAR
14	20Y-26-13231	BEARING
15	20Y-26-13241	PIN
16	20Y-26-13271	SHAFT
17	20Y-26-13280	SPACER
18	20Y-26-13291	COVER
19	20Y-26-13320	PLATE
20	20Y-26-14260	GEAR
21	20Y-26-14270	GEAR
22	20Y-26-14280	GEAR

SWING CIRCLE

ITEM	MACHINE MODEL	PART NUMBER
1	PC200-3	205-25-00022
2	PC200-5	20Y-25-11103
3	PC200-6	20Y-25-11100
4	PC200-7	20Y-25-21200
5	PC200-8	206-25-00200
6	PC220-5	20Y-25-11300
7	PC220-6	20Y-25-21200
8	PC220-7	206-25-00301
9	PC220-8	206-25-00301
10	PC240-8	206-25-00301
11	PC300-3	207-25-00021
12	PC300-5	207-25-51100
13	PC300-6	207-25-61100
14	PC300-7	207-25-61100
15	PC360-7	207-25-61100
16	PC400-1	208-25-00010
17	PC400-5	208-25-52100
18	PC400-6	208-25-61100
19	PC400-7	208-25-61100
20	PC460-7	208-25-61100

FRICION DISCS AND BRAKE BANDS

NO	PARTS NO	DESCRIPTION
1	100-22-15101	STCD OF
2	110-22-11320	STCD SM
3	110-22-11332	STCD OF
4	113-15-22711	PSTD PA
5	113-15-22720	CD SM
6	125-21-23121	PSTD SI
7	130-22-11320	STCD SM
8	131-10-11110	MCD SI
9	131-10-11120	MCD SM

10	131-10-61140	MCD SI
11	131-21-43440	CD SM
12	131-22-11320	STCD SM
13	135-15-22712	CD SI
14	135-15-22713	CD SI
15	135-15-22720	PSTD SM
16	135-15-22730	CD SM
17	135-33-51610	BRL FO
18	141-10-11110	MCD SI
19	141-10-11120	MCD SM
20	141-10-13120	BRL FO
21	144-10-12150	MCD SI
22	144-33-51620	BRL FO
23	144-33-51630	BRL FO
24	145-14-12710	PSTD SI
25	145-14-12711	PSTD SI
26	145-21-13120	STCD SI
27	145-21-13121	STCD SI
28	145-21-13130	STCD SM
29	145-21-13132	STCD SM
30	145-15-42760	MCD SM
31	150-21-23110	STCD SM
32	150-21-23120	STCD SI
33	154-15-12713	PSTD SI
34	154-15-12714	PSTD SI
35	154-15-12715	PSTD SI
36	154-15-12716	PSTD SI
37	154-22-11230	STCD SI
38	154-33-11131	BRL FO
39	175-15-12713	PSTD SI
40	175-15-12714	PSTD SI
41	175-15-12715	PSTD SI
42	175-15-12716	PSTD SI
43	175-15-42721	PSTD SM
44	175-15-42920	CD SM
45	175-22-11140	STCD SI
46	175-22-21150	STCD SI
47	175-22-21160	STCD SM
48	175-22-23111	CD SM
49	195-15-12713	CD SI
50	195-15-12714	CD SI
51	195-15-12715	CD SI
52	195-15-32710	PSTD SI

53	195-22-13340	CD SI
54	195-22-13341	CD SI
55	198-15-22810	CD SI
56	23S-15-12740	PSTD PA
57	280-15-12720	CD SM
58	281-15-12720	CD SM
59	287-15-12990	CD SM
60	312-15-11280	CD SM
61	324-15-12650	CD SM
62	324-15-12660	CD SI
63	34B-15-11340	CD SI
64	34C-15-11350	CD SI
65	34C-15-11360	CD SM
66	381-922 539-1	CD SM
67	381-922 541-1	CD PA
68	381-922 549-1	CD SM
69	381-922 551-1	CD PA
70	3EA-15-12721	CD SI
71	3EC-15-19270	CD SI
72	3EC-15-19280	CD SM
73	3EE-15-11510	CD SI
74	3EE-15-21230	CD SM
75	3EE-15-41290	CD SI
76	424-15-12710	CD SI
77	424-15-12711	CD SI
78	424-15-12720	CD SM
79	426-15-12720	CD SM

UNIVERSAL JOINTS

NO.	PART NO.	MACHINE MODEL
1	175-20-00060	D155A-1A
2	175-20-11000	D155A-1A
3	154-20-00020	D85A-18
4	154-20-10002	D85A-18
5	144-10-12610	D60A-8
6	144-10-12100	D60A-8
7	150-11-12360	D80A-12
8	150-11-00097	D80A-12

CLUTCH & FINAL DRIVE PARTS

NO	PARTS NO	DESCRIPTION
1	01010-30820	BOLT, D60
2	01010-30825	BOLT, D60
3	01010-31030	BOLT, D60
4	01010-31055	BOLT, D60

5	01010-51020	BOLT,CAP, D60
6	01010-51025	BOLT, D60
7	01010-51055	BOLT, FINAL DRIVE, PC200-5
8	01010-51235	BOLT, FINAL DRIVE, PC200-5
9	01010-51440	BOLT, D60
10	01010-51645	BOLT, FINAL DRIVE, PC200-5
11	01010-51670	BOLT, FINAL DRIVE, PC200-5
12	01011-51200	BOLT, FINAL DRIVE, PC200-5
13	01140-31050	STUD, D60
14	01210-20416	SCREW, D60
15	01530-03912	NUT, D60
16	01580-00403	NUT, D60
17	01582-01008	NUT, D60
18	01582-01815	NUT, D60
19	01593-01008	NUT, D60
20	01602-00825	WASHER,SPRING, D60
21	01602-01030	WASHER,SPRING, D60
22	01602-21030	WASHER,SPRING, D60
23	01602-21442	WASHER,SPRING, D60
24	01640-21016	WASHER, D60
25	01643-31232	WASHER, FINAL DRIVE, PC200-5
26	01643-31645	WASHER, FINAL DRIVE, PC200-5
27	04000-00522	KEY, D60
28	04000-00538	KEY, D60
29	04020-01024	PIN,DOWEL, D60
30	04025-00520	PIN,SPRING, D60
31	04050-02018	PIN,COTTER (K1A), D60
32	04050-03020	PIN,COTTER (K1A), D60
33	04260-01905	BALL, FINAL DRIVE, PC200-5
34	06120-02216	BEARING,NEEDLE, D60
35	06122-02204	SEAL,BEARING (K1A), D60
36	07000-03040	O-RING (K1A), D60
37	07002-02434	O-RING, FINAL DRIVE, PC200-5
38	07002-02434	O-RING, FINAL DRIVE, PC200-5
39	07017-00022	SEAL,OIL (K1A), D60
40	07020-00675	FITTING,GREASE, D60
41	07030-00252	BREATHER, FLYWHEEL CLUTCH, D60
42	07042-00108	PLUG,TAPER, D60
43	07043-00108	PLUG,TAPER, D60
44	07044-12412	PLUG, FINAL DRIVE, PC200-5
45	07044-13620	PLUG, FLYWHEEL CLUTCH, D60
46	07049-01215	PLUG, FINAL DRIVE, PC200-5
47	130-27-51151	NUT, D60

48	131-10-25160	SPRING, D60
49	131-10-42211	DRUM, FLYWHEEL CLUTCH, D60
50	131-21-43411	SPRING, STEERING CLUTCH, D60
51	131-21-43421	OUTER DRUM, STEERING CLUTCH, D60-6
52	131-21-43433	INNER DRUM, STEERING CLUTCH, D60
53	131-21-43451	PLATE, STEERING CLUTCH, D60
54	131-21-43540	BOLT, STEERING CLUTCH, D60
55	135-21-12240	BUSHING, D60
56	141-10-00552	RELIEF VALVE ASS'Y, D60
57	141-10-31121	HUB, FLYWHEEL CLUTCH, D60
58	141-10-31130	LINK, FLYWHEEL CLUTCH, D60
59	141-10-31140	COLLAR, FLYWHEEL CLUTCH, D60
60	141-10-31220	PLATE, FLYWHEEL CLUTCH, D60
61	141-10-32280	SHAFT, FLYWHEEL CLUTCH, D60
62	141-10-32380	LEVER, FLYWHEEL CLUTCH, D60
63	141-10-33230	ROD, D60
64	141-10-33240	JOINT, D60
65	141-10-33251	SPRING, D60
66	141-10-33261	GUIDE,SPRING LOWER, D60
67	141-10-33270	WASHER, D60
68	141-10-33290	COVER, FLYWHEEL CLUTCH, D60
69	141-10-34112	HOUSING, D60
70	141-10-34120	GASKET (K1A), D60
71	141-10-34133	BRACKET, D60
72	141-10-34150	GASKET (K1A), D60
73	141-10-34170	LINK, D60
74	141-10-34222	BOOT, D60
75	141-10-34230	PLATE, D60
76	141-10-34310	PLATE, D60
77	141-10-34320	COVER, D60
78	141-10-35113	SHAFT, D60
79	141-10-35123	LEVER, D60
80	141-14-32117	FORK, TRANSMISSION, D60
81	141-14-32125	FORK, TRANSMISSION, D60
82	141-14-32134	FORK, TRANSMISSION, D60
83	141-14-32233	FORK, TRANSMISSION, D60
84	141-27-31193	FLANGE, D60
85	141-27-31224	HUB, D60
86	141-27-32115	BOSS, SPROCKET, D60
87	141-27-32330	NUT, D60
88	144-10-11330	VALVE, D60
89	144-10-11340	PISTON, D60
90	144-10-11350	SPRING, D60

91	144-10-12160	SHAFT, FLYWHEEL CLUTCH, D60
92	144-10-12170	COUPLING, FLYWHEEL CLUTCH, D60
93	144-10-12180	HOLDER, FLYWHEEL CLUTCH, D60
94	144-10-12190	HUB, FLYWHEEL CLUTCH, D60
95	144-10-12230	COVER, FLYWHEEL CLUTCH, D60
96	144-10-12240	COLLAR, FLYWHEEL CLUTCH, D60
97	144-10-12270	COLLAR, FLYWHEEL CLUTCH, D60
98	144-10-12280	COLLAR, FLYWHEEL CLUTCH, D60
99	144-10-12710	LINK, FLYWHEEL CLUTCH, D60
100	144-10-12730	PIN, FLYWHEEL CLUTCH, D60
101	144-10-51120	BRACKET, FLYWHEEL CLUTCH, D60
102	144-10-51151	GUIDE, FLYWHEEL CLUTCH, D60
103	144-10-52110	LEVER, FLYWHEEL CLUTCH, D60
104	144-21-12142	SHAFT, D60
105	144-21-12150	BOLT,REAMER, D60
106	144-21-12161	PLATE,LOCK, D60
107	144-21-12170	PLATE,LOCK, D60
108	144-21-12233	FLANGE, D60
109	144-21-12310	SCREW, D60
110	144-21-12320	PIN,DOWEL, D60
111	144-21-12330	PLATE,LOCK, D60
112	144-21-12374	RING,SEAL, D60
113	144-21-12413	HUB, STEERING CLUTCH, D60
114	144-21-12414	HUB, STEERING CLUTCH, D60
115	144-21-12414	HUB, D60
116	144-21-12431	CAGE, BEARING L. H., D60
117	144-21-12431	CAGE,BEARING L.H., D60
118	144-21-12441	CAGE, BEARING R. H., D60
119	144-21-12441	CAGE,BEARING R.H., D60
120	144-21-12480	PLATE,LOCK, D60
121	144-21-52460	GEAR,BEVEL, D60
122	144-22-51110	OUTER DRUM, STEERING CLUTCH, D60
123	144-873-0310	O-RING ASS'Y, FINAL DRIVE, PC200-5
124	144-874-6640	BEARING, D60
125	145-14-11320	PLUG, D60
126	145-27-41240	PINION, FIRST, D65
127	145-27-41321	GEAR, FIRST, D65
128	145-27-41430	PINION, SECOND, D65
129	145-27-41510	RING GEAR, D65
130	150-10-00090	BAN, INERTIA BRAKE, D80
131	150-10-11141	PLATE, FLYWHEEL CLUTCH, D60
132	150-10-11161	BRACKET, FLYWHEEL CLUTCH, D80
133	150-10-11170	BUSHING, FLYWHEEL CLUTCH, D60

134	150-10-11180	WASHER, FLYWHEEL CLUTCH, D60
135	150-10-11190	GUIDE, FLYWHEEL CLUTCH, D80
136	150-10-11210	COLLAR, FLYWHEEL CLUTCH, D60
137	150-10-11210	COLLAR, FLYWHEEL CLUTCH, D80
138	150-10-11221	SPRING, FLYWHEEL CLUTCH, D80
139	150-10-11331	SHAFT, FLYWHEEL CLUTCH, D80
140	150-10-12621	BLOCK, FLYWHEEL CLUTCH, D60
141	150-10-21320	RING, FLYWHEEL CLUTCH, D80
142	150-10-21390	COLLAR, FLYWHEEL CLUTCH, D80
143	150-14-15260	CLAMP, D60
144	150-27-00262	SEAL RING ASS'Y, FINAL DRIVE, PC200-5
145	150-27-00270	O-RING ASS'Y, FINAL DRIVE, PC200-5
146	154-21-12161	CAGE, BEARING, D85
147	154-21-13110	OUTER DRUM, STEERING CLUTCH, D80
148	154-22-11111	OUTER DRUM, STEERING CLUTCH, D85
149	154-22-11122	INNER DRUM, STEERING CLUTCH, D85
150	154-27-11256	PINION, FIRST, D85
151	154-27-11313	GEAR, FIRST, D85
152	154-27-11327	PINION, SECOND, D85
153	154-27-12110	RING GEAR, D85
154	154-27-12122	HUB, D85
155	154-27-12131	BOSS, SPROCKET, D85
156	170-10-11342	WASHER, FLYWHEEL CLUTCH, D80
157	170-10-11410	HOLDER, FLYWHEEL CLUTCH, D80
158	170-10-11450	PIN, FLYWHEEL CLUTCH, D80
159	170-10-11460	ROLLER, FLYWHEEL CLUTCH, D80
160	170-10-15130	O-RING (K1A), D60
161	170-10-15190	COUPLING, D60
162	170-10-15211	WASHER, LOCK (K1A), D60
163	170-10-15231	RING, SNAP, D60
164	170-10-15251	RING, SNAP, D60
165	170-10-15281	SPACER, D60
166	170-10-15290	WASHER, D60
167	170-10-15370	PIN, D60
168	170-10-16120	BUSHING, FLYWHEEL CLUTCH, D80
169	175-21-32162	HUB, D85
170	175-22-11122	INNER DRUM, STEERING CLUTCH, D80
171	175-22-21190	SEAL, STEERING CLUTCH, D80
172	175-22-21271	INNER DRUM, STEERING CLUTCH, D155
173	175-22-21281	OUTER DRUM, STEERING CLUTCH, D155
174	175-27-31233	PINION, SECOND, D155
175	175-27-31255	GEAR, FIRST, D155
176	175-27-31362	RING GEAR, D155

177	175-27-31384	HUB, D155
178	175-27-31384	BOSS, SPROCKET, D155
179	175-27-31463	FLANGE, D85
180	175-27-31463	FLANGE, D155
181	175-27-31495	PINION, FIRST, D155
182	205-26-71541	WASHER, THRUST, FINAL DRIVE, PC200-5
183	205-27-71570	SPACER, FINAL DRIVE, PC200-5
184	20Y-27-00015	FINAL DRIVE ASS'Y, FINAL DRIVE, PC200-5
185	20Y-27-00030	SPACER KIT, FINAL DRIVE, PC200-5
186	20Y-27-00031	SPACER KIT, FINAL DRIVE, PC200-5
187	20Y-27-11180	BOLT, FINAL DRIVE, PC200-5
188	20Y-27-11240	HOLDER, FINAL DRIVE, PC200-5
189	20Y-27-11560	BOLT, FINAL DRIVE, PC200-5
190	20Y-27-11570	BEARING, FINAL DRIVE, PC200-5
191	20Y-27-11581	SPROCKET, FINAL DRIVE, PC200-5
192	20Y-27-13110	COVER, FINAL DRIVE, PC200-5
193	20Y-27-13120	HUB, FINAL DRIVE, PC200-5
194	20Y-27-13130	SHAFT, FINAL DRIVE, PC200-5
195	20Y-27-13140	GEAR, FINAL DRIVE, PC200-5
196	20Y-27-13150	CARRIER, FINAL DRIVE, PC200-5
197	20Y-27-13160	PIN, FINAL DRIVE, PC200-5
198	20Y-27-13170	HOLDER, FINAL DRIVE, PC200-5
199	20Y-27-13180	BEARING, FINAL DRIVE, PC200-5
200	20Y-27-13190	GEAR, FINAL DRIVE, PC200-5
201	20Y-27-13210	GEAR, FINAL DRIVE, PC200-5
202	20Y-27-13220	GEAR, FINAL DRIVE, PC200-5
203	20Y-27-13230	CARRIER, FINAL DRIVE, PC200-5
204	20Y-27-13240	PIN, FINAL DRIVE, PC200-5
205	20Y-27-13260	BEARING, FINAL DRIVE, PC200-5
206	20Y-27-13270	RETAINER, FINAL DRIVE, PC200-5
207	20Y-27-13280	BOLT, FINAL DRIVE, PC200-5
208	20Y-27-13290	O-RING, FINAL DRIVE, PC200-5

EXCAVATOR PIN & BUSHING

NO.	PART NUMBER	DESCRIPTION
1	205-70-71190	PIN
2	20Y-70-31160	PIN
3	206-70-55160	PIN
4	07177-07530	BUSHING
5	20Y-70-32410	BUSHING
6	205-70-73130	LINK

7	205-70-73270	PIN
8	21K-70-12170	BUSHING
9	21K-70-21160	PIN
10	21K-70-31360	PIN
11	21K-70-71180	PIN
12	21K-70-72240	BUSHING
13	205-70-72130	BUSHING
14	20Y-70-21640	BUSHING
15	21K-70-23140	PIN
16	21K-70-23190	PIN
17	21K-70-23220	PIN
18	21K-70-31390	BUSHING
19	21K-70-72211	BUSHING
20	22U-70-21191	PIN
21	707-76-70060	BUSHING
22	707-76-80020	BUSHING
23	707-76-80230	BUSHING
24	208-70-61230	PIN
25	208-70-33140	PIN
26	208-70-61240	PIN
27	208-70-61220	PIN
28	208-70-61191	PIN
29	208-70-61210	PIN
30	208-70-31181	PIN
31	208-70-31160	PIN
32	208-70-61860	PIN
33	208-70-73520	PIN
34	208-70-73130	PIN
35	208-70-61240	PIN
36	208-70-61220	PIN
37	208-70-61191	PIN
38	208-70-61210	PIN
39	208-70-71580	PIN
40	208-70-71590	PIN
41	208-70-61860	PIN
42	208-70-32140	BUSHING
43	208-70-13141	BUSHING
44	707-76-11130	BUSHING
45	707-76-10130	BUSHING
46	707-76-10230	BUSHING
47	208-70-61610	BUSHING
48	208-70-61521	BUSHING
49	208-70-34230	BUSHING

50	208-70-72170	BUSHING
51	208-70-72530	BUSHING
52	208-70-73510	BUSHING
53	208-70-72530	BUSHING
54	707-76-11130	BUSHING
55	707-76-10230	BUSHING
56	208-70-71510	BUSHING
57	208-70-72540	BUSHING
58	208-70-34230	BUSHING

MISCELLANEOUS

NO	PARTS NO	DESCRIPTION
1	01010-31020	BOLT
2	01010-31225	BOLT
3	01010-31235	BOLT
4	01010-31650	BOLT
5	01010-31655	BOLT
6	01010-32095	BOLT
7	01010-32460	BOLT
8	01010-51016	BOLT
9	01010-51020	BOLT
10	01010-51030	BOLT
11	01010-51050	BOLT
12	01010-51055	BOLT
13	01010-51225	BOLT
14	01010-51230	BOLT
15	01010-51235	BOLT
16	01010-51240	BOLT
17	01010-51245	BOLT
18	01010-51260	BOLT
19	01010-51430	BOLT
20	01010-51435	BOLT
21	01010-51450	BOLT
22	01010-51455	BOLT
23	01010-51635	BOLT
24	01010-51640	BOLT
25	01010-51650	BOLT
26	01010-51655	BOLT
27	01010-51665	BOLT
28	01010-51670	BOLT
29	01010-51840	BOLT
30	01010-52050	BOLT
31	01010-52055	BOLT

32	01010-52060	BOLT
33	01010-52065	BOLT
34	01010-52250	BOLT
35	01010-52265	BOLT
36	01011-52005	BOLT
37	01011-52055	BOLT
38	01011-52410	BOLT
39	01011-52450	BOLT
40	01012-51245	BOLT
41	01580-03629	NUT
42	01580-03931	NUT
43	01580-12419	NUT
44	01580-13629	NUT
45	01582-11613	NUT
46	01590-11215	NUT
47	01590-13033	NUT
48	01599-01011	NUT
49	01602-01030	WASHER,SPRING
50	01602-01236	WASHER,SPRING
51	01602-01236	WASHER,SPRING
52	01602-02472	WASHER,SPRING
53	01602-21030	WASHER,SPRING
54	01602-21236	WASHER,SPRING
55	01602-21442	WASHER,SPRING
56	01602-21648	WASHER,SPRING
57	01602-22060	WASHER,SPRING
58	01602-22268	WASHER,SPRING
59	01602-22472	WASHER,SPRING
60	01641-21016	WASHER
61	01643-21032	WASHER
62	01643-31232	WASHER
63	01643-31445	WASHER
64	01643-31645	WASHER
65	01643-31845	WASHER
66	01643-32260	WASHER
67	01643-32460	WASHER
68	04000-01030	KEY
69	04020-01024	PIN
70	04020-01228	PIN,DOWEL
71	04022-12025	PIN (WELDED)
72	04050-06045	PIN,COTTER
73	04050-13015	PIN,COTTER
74	04064-04518	RING,SNAP

75	04064-07525	RING
76	04065-09030	RING,SNAP
77	07000-02060	O-RING
78	07000-02095	O-RING
79	07000-02110	O-RING
80	07000-02125	O-RING (K10)
81	07000-03025	O-RING
82	07000-03040	O-RING
83	07000-03052	O-RING (K6)
84	07000-03078	O-RING
85	07000-05225	O-RING
86	07000-12105	O-RING
87	07000-13035	O-RING
88	07000-15068	O-RING
89	07000-15070	O-RING
90	07000-15090	O-RING
91	07019-00100	SEAL
92	07019-00130	SEAL,DUST
93	07020-00000	FITTING,GREASE
94	07020-00000	FITTING
95	07020-00000	FITTING,GREASE
96	07020-00675	FITTING,GREASE
97	07049-01418	PLUG
98	07049-01822	PLUG
99	07052-31624	PLUG
100	07052-31624	PLUG
101	07102-20503	HOSE
102	07137-04006	BUSHING
103	07145-00055	SEAL,DUST
104	07146-02106	RING,BACK-UP
105	07155-00720	RING
106	07155-01125	RING,WEAR
107	07177-06515	BUSHING
108	07177-06530	BUSHING
109	07179-00088	RING,SNAP
110	07283-13442	CLIP
111	07959-20001	VALVE
112	07959-30000	VALVE
113	08063-01000	SWITCH
114	08063-02000	SWITCH
115	08086-10000	SWITCH
116	09370-00070	U-PACKING
117	120-43-33561	LEVER

118	125-62-21170	SPRING
119	130-30-13170	BOLT
120	130-63-12761	PIN
121	131-30-44140	PISTON
122	135-43-15810	GUIDE
123	135-43-15830	PLATE
124	135-43-15841	ROD
125	140-60-15460	TUBE
126	141-30-14130	WASHER
127	141-30-14140	PLATE,LOCK
128	141-30-17160	BOLT
129	141-30-31262	PLATE (WELDED)
130	141-30-31350	PIN
131	141-30-33111	IDLER
132	141-30-33122	SHAFT,IDLER
133	141-30-33134	BRACKET ASS'Y,L.H. OUTER AND R.H. INNER
134	141-30-33144	BRACKET ASS'Y,L.H. INNER AND R.H. OUTER
135	141-30-33170	PLATE,GUIDE (WELDED)
136	141-30-33170	PLATE,GUIDE (WELDED)
137	141-30-33182	COVER
138	141-30-33220	SHIM 1.0MM
139	141-30-34111	SPRING,RECOIL OUTER
140	141-30-34140	BUSHING
141	141-30-34160	COLLAR
142	141-30-34171	PLATE,LOCK
143	141-30-34211	CYLINDER
144	141-30-34230	SEAL,OIL
145	141-30-34263	COVER
146	141-30-34270	COVER
147	141-30-34281	ROD
148	141-30-34310	YOKE,FRONT IDLER
149	141-30-37310	BOLT
150	141-43-33160	PLATE
151	141-43-33512	LEVER
152	141-43-33542	LEVER
153	141-43-33553	LEVER
154	144-30-12150	COVER,L.H.
155	144-30-12160	COVER,R.H.
156	144-30-12171	GUARD,L.H.
157	144-30-12181	GUARD,R.H.
158	144-30-14110	BOLT
159	144-30-14130	PILOT
160	144-30-14150	SPRING,RECOIL INNER

161	144-30-14160	BOLT
162	144-30-14330	COVER
163	144-30-37112	COVER,L.H.
164	144-30-37122	COVER,R.H.
165	144-30-37183	SUPPORT,L.H.
166	144-30-37193	SUPPORT,R.H.
167	144-30-51150	PLATE (WELDED)
168	144-43-12310	LEVER
169	144-43-12320	LEVER
170	144-43-12341	LEVER
171	144-43-12420	LEVER
172	144-43-18411	LEVER
173	144-43-18420	LEVER
174	144-43-18430	LEVER
175	144-43-18441	FLOOR
176	144-43-18460	HOLDER
177	144-43-18470	BRACKET
178	144-43-18480	SHAFT
179	144-43-25350	ROD
180	144-43-25410	BRACKET,L.H.
181	144-43-25420	BRACKET,R.H.
182	144-49-13143	TUBE
183	144-49-13143	TUBE
184	144-49-14122	TUBE
185	144-49-16310	TUBE
186	144-49-16310	TUBE
187	144-49-18370	TUBE
188	144-49-18370	TUBE
189	144-49-18381	TUBE
190	144-49-18381	TUBE
191	144-49-52151	TUBE
192	144-49-52161	TUBE
193	144-49-52210	TUBE
194	144-49-52220	TUBE
195	144-49-53111	TUBE
196	144-49-53280	TUBE
197	144-49-53290	TUBE
198	144-60-11160	ELEMENT
199	144-60-15431	BUSHING
200	144-60-15450	BUSHING
201	144-60-15491	PLATE
202	144-60-21151	COVER
203	144-60-21160	VALVE ASS'Y

204	144-63-12120	ROD,PISTON
205	144-63-12130	HEAD,CYLINDER
206	144-63-12230	GLAND
207	144-63-12360	NUT
208	144-63-12540	CYLINDER,L.H.
209	144-63-12571	PLATE
210	144-63-12582	TUBE,L.H.
211	144-63-12592	TUBE,L.H.
212	144-63-12640	CYLINDER,R.H.
213	144-63-12682	TUBE,R.H.
214	144-63-12692	TUBE,R.H.
215	144-63-92170	SEAL,DUST
216	144-63-92360	PISTON SUB ASS'Y
217	144-813-1390	SEAT (WELDED)
218	144-871-1250	LOCK
219	144-871-1510	COVER,L.H.
220	144-871-1520	COVER,R.H.
221	144-871-1530	COVER,L.H. (REINFORCED TYPE)
222	144-871-1540	COVER,R.H. (REINFORCED TYPE)
223	144-871-5351	GUARD,FRONT OUTER R.H. (WELDED)
224	144-871-5351	GUARD,FRONT INNER L.H. (WELDED)
225	144-871-5351	GUARD,REAR L.H. (WELDED)
226	144-871-5361	GUARD,FRONT OUTER L.H. (WELDED)
227	144-871-5361	GUARD,FRONT INNER R.H. (WELDED)
228	144-871-5361	GUARD,REAR R.H. (WELDED)
229	144-871-5380	PLATE
230	144-947-1990	DRUM,BRAKE
231	144-947-2970	RIVET
232	145-30-31241	HEAD (WELDED)
233	145-30-31250	BUSHING
234	145-30-31320	SEAL,DUST
235	145-30-34340	PACKING
236	145-30-37240	COLLAR
237	145-49-00033	FILTER ASS'Y
238	14G-49-21141	TUBE
239	150-30-13430	RING
240	150-30-13442	PACKING
241	150-30-13460	RING,SNAP
242	150-30-13480	RING
243	150-30-15553	SPACER
244	150-30-15563	BOLT
245	150-30-22118	IDLER
246	150-95-00080	BRAKE BAND ASS'Y

247	150-95-13210	BAND,BRAKE
248	150-95-13220	LINING,BRAKE
249	150-95-13230	END,BAND
250	150-95-13240	RIVET
251	154-27-12273	TEETH
252	154-30-00015	BRACE HEAD ASS'Y,L.H.
253	154-30-00025	BRACE HEAD ASS'Y,R.H.
254	154-30-00166	COVER ASS'Y
255	154-30-05040	SHIM KIT
256	154-30-05050	SHIM KIT
257	154-30-05060	SHIM KIT
258	154-30-11134	ROD
259	154-30-11145	CYLINDER
260	154-30-11174	PILOT
261	154-30-11192	PLATE
262	154-30-11212	PACKING
263	154-30-11224	SHAFT
264	154-30-11234	STOPPER
265	154-30-11242	PILOT
266	154-30-11251	COVER
267	154-30-11262	PACKING
268	154-30-11274	SUPPORT
269	154-30-11284	SUPPORT
270	154-30-11326	COVER
271	154-30-11332	WASHER
272	154-30-11383	COVER
273	154-30-11393	COVER
274	154-30-11419	GUARD,INNER R.H.
275	154-30-11429	GUARD,INNER L.H.
276	154-30-11438	GUARD,OUTER R.H.
277	154-30-11448	GUARD,OUTER L.H.
278	154-30-11497	YOKE
279	154-30-11540	LOCK
280	154-30-11683	PLATE
281	154-30-11752	SPRING
282	154-30-11763	WASHER
283	154-30-11771	PISTON
284	154-30-11810	BUSHING
285	154-30-11821	PACKING
286	154-30-11831	PACKING
287	154-30-11925	GUARD (WELDED)
288	154-30-11925	GUARD (WELDED)
289	154-30-11935	GUARD (WELDED)

290	154-30-11935	GUARD (WELDED)
291	154-30-11941	COVER
292	154-30-11951	COVER
293	154-30-11963	PLATE (WELDED)
294	154-30-12170	BUSHING
295	154-30-12310	PLATE (WELDED)
296	154-30-12321	COVER
297	154-30-12530	CAP
298	154-30-12540	CAP
299	154-30-12590	PLATE (WELDED)
300	154-30-12611	SUPPORT
301	154-30-12621	SUPPORT
302	154-30-12631	GUIDE ASS'Y
303	154-30-12650	BOLT
304	154-30-12660	BOLT
305	154-30-12670	PLATE
306	154-30-12711	COVER
307	154-30-12721	COVER
308	154-30-12730	SEAT
309	154-30-12750	PLATE
310	154-30-12770	SPRING
311	154-30-12910	COVER,L.H.
312	154-30-12930	COVER,R.H.
313	154-30-14130	SPACER
314	154-30-22190	RETAINER
315	154-30-23122	SHAFT
316	154-33-00080	SAFETY VALVE ASS'Y
317	154-33-11333	LEVER,R.H.
318	154-33-11345	LEVER,L.H.
319	154-33-21142	CAP
320	154-33-21310	SHAFT,OIL
321	154-33-21320	BUSHING
322	154-33-21330	BUSHING
323	154-33-21340	SEAL,OIL
324	154-33-21350	SEAL
325	154-33-21441	COVER
326	154-33-21451	GASKET
327	154-33-22162	COVER
328	154-33-22172	COVER
329	154-33-22181	GASKET
330	154-33-22280	TUBE,L.H.
331	154-33-22290	TUBE,R.H.
332	154-33-22310	TUBE,L.H.

333	154-33-22320	TUBE,R.H.
334	154-40-00021	CONTROL VALVE ASS'Y
335	154-40-00070	RELIEF VALVE ASS'Y
336	154-43-15112	BRACKET
337	154-43-15131	COVER
338	154-43-15150	BRACKET
339	154-43-15192	LEVER,L.H.
340	154-43-15212	LEVER,R.H.
341	154-43-15221	LEVER,L.H.
342	154-43-15231	LEVER,R.H.
343	154-43-15330	SPRING
344	154-43-15431	YOKE
345	154-43-15440	LEVER,L.H.
346	154-43-15450	LEVER,R.H.
347	154-43-15460	SHAFT
348	154-43-15470	YOKE
349	154-43-15480	LOCK
350	154-43-15490	BRACKET
351	154-43-15513	SUPPORT
352	154-43-15531	LEVER,R.H.
353	154-43-15541	SHAFT
354	154-43-15560	BRACKET
355	154-43-15571	SHAFT
356	154-43-15581	LEVER
357	154-43-15591	LEVER,L.H.
358	154-43-15642	BOWL
359	154-43-15651	BAR
360	154-43-15780	LOCK
361	154-43-15790	LEVER
362	154-43-15790	LEVER
363	154-43-15870	ROD,R.H.
364	154-43-15880	ROD,L.H.
365	154-43-15890	LEVER
366	154-43-15910	LEVER
367	154-43-15920	LEVER
368	154-43-15940	LEVER
369	154-49-21111	TUBE
370	154-49-21123	TUBE
371	154-49-21133	TUBE
372	154-49-21163	TUBE
373	154-49-21175	TUBE
374	154-49-21184	TUBE
375	154-49-21242	TUBE

376	154-49-21327	TUBE
377	154-49-21332	TUBE
378	154-49-21353	TUBE
379	154-60-51401	FILTER ASS'Y
380	154-70-11314	EDGE,CUTTING
381	154-70-13134	BRACKET (WELDED)
382	155-30-11390	PLATE (WELDED)
383	155-30-13230	SPRING
384	170-14-18161	SPRING
385	170-14-18171	SLEEVE
386	170-30-14211	PISTON
387	170-30-14221	BUSHING
388	170-30-14230	RING,PISTON
389	170-30-14441	GASKET
390	175-30-23114	IDLER
391	175-30-23121	SHAFT
392	175-30-23180	NUT
393	175-30-24131	SEAT
394	175-30-24223	CYLINDER
395	175-30-24242	PACKING
396	175-30-24270	PLATE
397	175-30-24361	PLUG
398	175-30-27133	COVER
399	175-30-27143	COVER
400	175-30-32132	GUARD
401	175-30-32142	GUARD
402	175-30-32175	GUARD
403	175-30-32185	GUARD
404	175-30-32195	GUARD
405	175-30-33215	PLATE
406	175-30-33272	GUIDE ASS'Y
407	175-30-34140	PILOT
408	175-30-34150	PILOT
409	175-30-34161	STOPPER
410	175-30-34180	SPRING
411	175-30-34190	SPRING
412	175-30-34210	SHAFT
413	175-30-34261	GASKET
414	175-30-34290	PLATE
415	175-30-34312	BOLT
416	175-30-34320	SLEEVE
417	175-30-34331	COVER
418	175-30-37103	COVER ASS'Y

419	175-30-37113	SUPPORT
420	175-30-37154	COVER
421	175-30-37170	COVER
422	175-30-37186	COVER
423	175-30-37200	COVER ASS'Y
424	175-33-24421	HOSE,L.H.
425	175-43-11311	YOKE
426	175-43-14150	CAGE
427	175-43-31470	PIN
428	175-49-00226	STEERING FILTER A.
429	175-49-00233	CASE ASS'Y
430	175-49-00253	COVER ASS'Y
431	175-49-11580	ELEMENT
432	175-49-11580	ELEMENT
433	175-70-26310	EDGE
434	175-71-11281	SCREW
435	175-71-11351	SHAFT
436	175-71-22272	BIT,END
437	175-71-22282	BIT,END
438	176-30-43111	SUPPORT
439	176-30-43121	SUPPORT
440	176-30-44110	YOKE
441	178-30-12140	GUARD
442	178-30-12150	PLATE
443	178-30-12160	PLATE
444	178-30-12170	PLATE
445	178-30-12171	GUARD
446	195-06-23110	GAUGE,WATER TEMPERATURE ENGINE
447	195-06-23120	GAUGE,OIL TEMPERATURE
448	195-06-23130	GAUGE,PRESSURE ENGINE OIL
449	195-06-23150	GAUGE
450	195-30-13191	LUBRICATOR
451	195-30-14151	WASHER
452	195-30-14160	PLATE
453	195-30-17960	SEAT
454	198-30-14420	CAP
455	198-30-14420	CAP
456	281-16-11290	ELEMENT
457	701-30-51002	VALVE ASS'Y
458	701-31-11002	VALVE ASS'Y
459	707-40-11090	RETAINER
460	707-44-11080	RING,PISTON
461	707-51-65110	PACKING,ROD

